




Klubby 1.1" Player

User manual

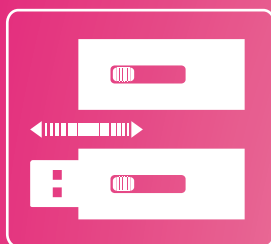

www.memup.com

Important Safety Instruction

1. Read and follow Instructions: All the safety and operating instructions should be read before the product is operated.
2. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
3. Attachments: Use only attachments recommended by Memup.
4. Water and Moisture: Do not use this product near water.
5. Accessories: Use only with carts, stands, tripods, brackets, or tables recommended by Memup or sold with the product.

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
6. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.
7. Power Sources: This product should be operated only from the type of power source indicated on the rating label. For products intended to operate from battery power or other sources, refer to the operating instructions.
8. Lightning: For added protection for this product, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning or power-line surges.
9. Object and Liquid Entry: Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
10. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
11. Damage Requiring Service: Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions: a) when the power-supply or plug is damaged; b) if liquid has been spilled or if objects have fallen into the product; c) if the product has been exposed to rain or water; d) if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation; e) if the product has been dropped or damaged in any way; f) when the product exhibits a distinct change in performance—this indicates a need for service.
12. Heat: The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Package Contents

Please make sure that the items shown below are included in the package. Should an item be missing, please contact the local retailer from which you purchased this product.

1. KLUBBY
2. Stereo Earphones
3. Quick starter Guide


Features

- 1.1" LCD screen
- Integrated flash memory
- Plays MP3 and WMA digital music files
- Micro SD card reader for memory extension
- Mobile data storage function
- USB 2.0 connector for fast file transfers
- Integrated rechargeable battery

Getting Started

Controls at a glance

1. Play [▶] / Pause [||]
2. USB Connector
3. Power ON/OFF
4. Earphone Connector
5. Micro SD card slot
6. Previous / Backward [◀]
7. Next / Forward [▶]
8. Volume (+/-)
9. Menu (M)
10. Retour

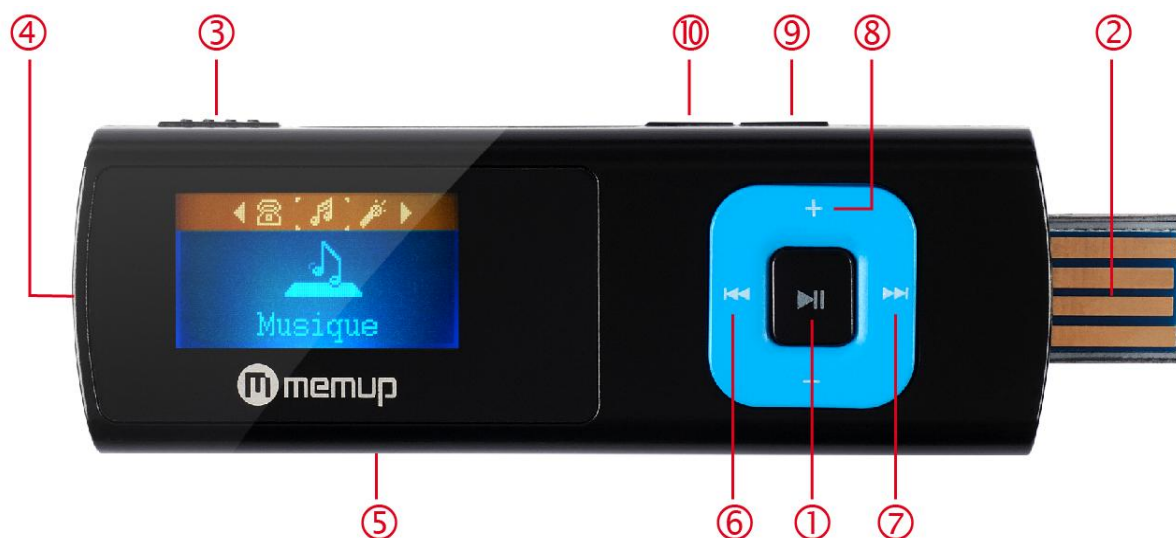

Turning KLUBBY On/Off

- Powering on the KLUBBY with ON/OFF button : the screen will display the main menu
- To turn KLUBBY off, push the ON/OFF button to OFF.

Charging

KLUBBY has an integrated rechargeable battery. Typical music playtime is up to 4 hours.

Upon initial use, the battery should be charged fully (4 hours) to ensure optimal performance and battery life.

Music play time is an estimated value. Actual play time may vary depending on encoding method used and other factors.

KLUBBY can be charged through a PC USB connection. Plug one end of the USB cable into the player's USB Port and plug the other end into the USB port of a powered-on computer. If the player is connected to a computer through a USB hub, the hub must be self-powered to charge the player's battery.

File transfers will extend the charging time. The battery used in this device may present a fire or chemical burn if mistreated. Do not disassemble, incinerate, or heat the battery. Do not connect the player to a power source other than that which is indicated here or on the label as this may result in the risk of fire or electric shock.

Main Menu

After powering on the MP3 player with ON/OFF button, you can see the main menu with 4 submenus, which allow you to select different functions and options. By using the [◀] or [▶] buttons, you can select the desire option, and then press [M] button to confirm the selection. To access at the main menu while you are inside any of these submenus, press [Return] button. (Short pressing the [M] switch usually opens the submenu option of each submenu).

The available options are:

Music Mode: Select this option to play song.

Record Mode: Select this option to record voice messages by the microphone inside.

Voice Mode: Select this option to replay recordings

Setting Mode: Select this option to access at system setup.

Music (Playing Music)

The music player option allows playing songs. To activate this option please follow here below instruction:

1. Power ON the MP3 Player, the screen will display the main menu
2. By using [◀] or [▶] buttons, select Music Mode option then press [M] button.
3. Press PLAY [▶ ||] button to start to play the first song available.

Key Functions at Music Mode

During the song play it is possible to activate the following controls.

PLAY [▶]	Press the play [▶] to start to play a song. Press again to pause the song. To restart to play the song press play button again.
REW & FFWD [◀] & [▶]	Press [◀] or [▶] to select the previous or the next song. Press and Hold the [◀] or [▶] buttons to rewind or fast forward the song.
Volume	First press [VOL] button. Then press [◀] or [▶] buttons to increase or decrease the volume.

Music Submenu

By short pressing the [M] button in stop mode, you can find the following music submenus.

Press [◀] or [▶] to choose, and then press [M] key to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Lyrics Display

The Player supports Lyrics Display “*LRC”, in which the lyrics would be shown synchronizing with the actually lyrics.

How to use text file?

The name of the file should be exactly the same as the song name.

Ex: If the name of the song is: *Kelly-Substitue.mp3* ➔ The name of the text file should be: *Kelly-Substitue.lrc*

When the player will detect a lyric file it will automatically show the text of the song.

Record: Voice Message Recorder

This option allows to record voice messages by using the built-in microphone. To record voice message, please follow here below instruction:

1. Power ON the MP3 Player, the screen will display the main menu.
2. By using [◀] or [▶] buttons, select REC option then press [M] button.
3. Press PLAY [▶ ||] button to start to recording.
4. You can listen to your wav file under the Voice mode submenu.



During recording, Press the PLAY [▶ ||] to start recording. Press the play button again to pause the recording. Hold the PLAY [▶ ||] button for longer time will eventually stop recording.

Under the recording submenu (in stop mode), you can choose to change the recording type 32KBPS, 64KBPS, 128KBPS, 192KBPS, 384KBPS

Voice: Voice Messages Player

The voice option allows playing the voice messages recorded by the MP3 Player.

To activate this option, please follow here below instructions:

1. Power ON the MP3 Player, the screen will display the main menu.
2. By using [◀] or [▶] buttons, select Voice mode option then press [M] button.
3. Press PLAY [▶ ||] button to start to play the first recording available.

Key Function at Voice Mode

During the recording play it is possible to activate the following controls.

PLAY [▶]	Press the PLAY [▶] to start to play a recording. Press the play button again to pause the recording. Hold the play button for longer time will eventually turn off the player
REW & FFWD [◀] & [▶]	Press [◀] or [▶] to select the previous or the next recording. Press and Hold the [◀] or [▶] buttons to rewind or fast forward the recording.
Volume	First press [VOL] button. Then press [▶] buttons to increase the volume and press [◀] button to decrease the volume.

Voice Submenu

By short pressing the [M] button in stop mode, you can find the following music submenus. Press [◀] or [▶] to choose, and then press [M] button to confirm each submenus. Use the same technique to navigate inside each of the submenus.

Settings (Setup Parameters)

The setting mode allows to access to MP3 Player setup system:

1. Power ON the MP3 player, the screen will display the main menu.
2. By using the [◀] or [▶] select Settings option then press [M] button to enter the system menu
3. By using the [◀] or [▶] select the system setup parameter and press [M] button.

Connecting to a Computer

Connect KLUBBY to a computer with the USB cable provided to:

- Transfer files to and from the player
- Perform basic file management functions.

Upon connection:

- Your computer will automatically recognize the player as a Removable Disk. An icon representing “KLUBBY” will appear under “Devices with Removable Storage” when you open “My Computer”.
- It may take Windows several minutes to recognize and set up the device the first time it is connected depending on your hardware configuration.

Transferring/Managing Files

The USB 2.0 connection makes it easy to transfer music quickly between the player and your computer. Simply use the player as you would any removable disk using basic operating system commands. You can also use KLUBBY to **store** video, photo, or any other type of files. If you need further assistance with transferring and managing files, please refer to your operating system’s instruction manual or on-screen help. If you are using media management software such as iTunes, Winamp, or Windows Media Player, please refer to their documentation for support. Do not disconnect or otherwise interrupt the player during file transfer—this could damage or corrupt the player’s firmware or your files.

Disconnecting from a Computer

Disconnect KLUBBY as instructed below to prevent data loss or file/firmware corruption.

Microsoft Windows

1. Double-click the green arrow in the taskbar located on the lower-right side of the computer screen (Safely Remove Hardware).
2. Safely Remove Hardware: Select “USB Mass Storage Device” from the list that appears and then click on “Stop”.
→ **Stop a Hardware Device:** Select “USB Mass Storage Device” from the list that appears and then click on “OK”.
3. When the “Safe to Remove Hardware” window appears, click the OK button and disconnect the USB cable from the player and your computer.

Macintosh OS X

1. On the left side of the Finder Window, identify the appropriate Removable Disk icon.
2. Click on the “Eject” arrow on the right of the Removable Disk icon.
3. Disconnect the USB cable from the player and your computer.

Troubleshooting

If you have a problem with this device, please read the troubleshooting guide below.

The player does not turn on.

Ensure that the player is fully charged. Try charging the player overnight (8 hours).

Ensure that the Hold/Lock switch is disengaged.

The buttons do not work.

Ensure that the player is fully charged. Try charging the player overnight (8 hours).

Ensure that the Hold/Lock switch is disengaged.

I cannot transfer files to the player.

Ensure that your computer is running a supported operating system.

If using a USB extension cable, ensure that it is securely attached to the player and the PC, or try using another USB cable.

If you have connected the player through a USB hub, try connecting the player directly to your computer.

Ensure that the player's memory capacity is not full.

Ensure that the Hold/Lock switch is disengaged.

There is no sound during playback.

Check the volume level. Ensure that the headphones are attached securely to the player.

The sound quality of the music is poor.

Try playing the file on your computer. If the sound quality is still poor, try to download the file again or re-encode the file yourself.

Ensure that the bit rate of the file is not too low. The higher the bit rate of the file, the better it will sound. The minimum recommended bit rate is 128kbps for MP3s and 96kbps for WMAs.

Try lowering the volume of the player.

Ensure that the headphones are attached securely to the player.

The player will not play my music file.

Ensure that the file is in a compatible format.

The file may be copy-protected and you no longer have authorization to play this file. If you feel this is in error, please contact the service from which you downloaded the file.